# theben KNX

Meteodata 140 S KNX Meteodata 140 S GPS KNX

Weather station

# 1. Designated use

The weather station measures temperature, brightness and wind speed. A rain sensor is also installed on the top of the device. The device is designed for use on buildings.

1409207

1409208

Time/date and position can be received via an integrated GPS module (with Meteodata 140 S GPS KNX – 1409208).

ETS (Engineering Tool Software) enables application programs to be selected, specific parameters and addresses to be assigned and transferred to the device.

## 2. Safety instructions

**WARNING** 

Danger of death through electric shock or fire!
> Installation should only be carried out by a professional electrician.

Please note the provisions of EN 50428 for switches or similar installations for use in building system technology regarding the correct installation of bus lines and setting up of devices. Tampering with, or making modifications to, the device will invalidate the guarantee.




Rain sensor becomes hot during use Do not touch the rain sensor.

- Rain is only detected when the rain sensor is sufficiently wet. There can be a delay between the first raindrops in a shower to the point where rain is detected.
- When the rain stops, and despite heating, it can take several minutes before the sensor is dry again and the device is able to detect that correctly.
- **Caution**: When it is windy, awnings/blinds take time to retract. Configure the wind thresholds below the value provided by the awning/blinds manufacturer.

### 3. Description


307068

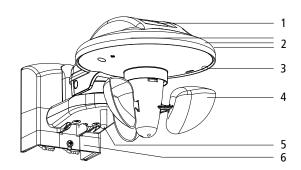

- 1 Rain sensor with heating
- 2 Three light sensors (front, right and left)
- 3 Programming push button and LED for the physical address
- 4 Rotor
- 5 Temperature sensor
- 6 Wall bracket with connection for mains supply and bus connection (KNX)


# 4. Installation

- > Do not install the wind sensor in a sheltered position.
- Avoid shadows (e.g. from masts etc.) and reflected light.
- Pay attention to mounting position
  - Rain sensor pointing up
  - Rotor pointing down

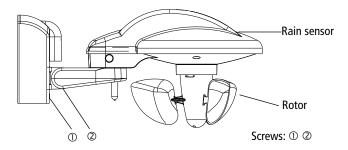

#### Wall-mounting


- Secure the wall bracket to the wall etc. with the screws and washers provided (see chap. 5).
  The washers are important to achieve the IP 44 protection rating.
- Feed the cables through the rubber seals and insert in the terminals.
- ➤ Loosen the screws ②.
- > Push down the weather station until it clicks into place.
- ➤ Tighten screw ①.
- Install the weather station horizontally and tighten screws ②.

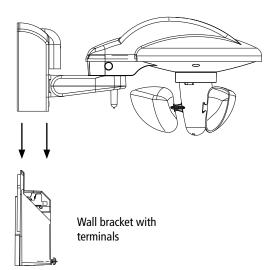

#### Mast or corner bracket fixing


The weather station can also be attached to a mast with mast or corner fixing (accessory 9070380). This installation method is recommended if wind is to be registered from all directions.

# 5. Electrical connection

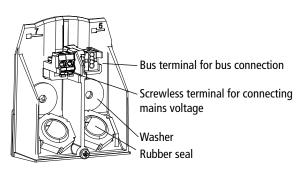

#### Feed in lines

Feed cable for mains connection or for bus through the rubber seals provided- and plug the lines into the screwless terminal or the bus terminal.

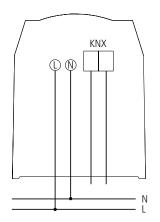

The weather station can also be operated without mains supply. The heating of the rain sensor and the GPS module will not function then.

# 6. Enter physical address

Press the programming push button 3 on the bottom of the device with a screwdriver. The programming LED flashes.

Meteodata 140 S KNX is in program mode.

# 7. Technical data

- Operating voltage: 110–230 V AC +10 % -15 %
- Frequency: 50–60 Hz
- Power consumption: typically 0,7 W (max. 5,5 W)
- Standby min.:  $\leq 0,5 \text{ W}$
- Permissible ambient temperature: -20 °C ... +55 °C
- Protection class: II subject to correct installation
- Protection rating: IP 44 in accordance with EN 60529
- Operating voltage KNX: bus voltage  $21-32 \text{ V DC} / \leq 3 \text{ mA}$

2-30 m/s

- Cable:
- max. cable cross-section 1.5 mm<sup>2</sup> NYM 5 x 1.5 mm<sup>2</sup> (mains cable) JSTY 2 x 2 x 0.8 mm (bus cable) Dm 50–60 mm (accessory 9070380)
- Mast installation:
- Wind sensor:
- Brightness sensor (3): 1–100,000 lux
- Temperature sensor:  $-30 \degree C$  to  $+60 \degree C$
- Rain sensor display: rain/no rain

The ETS database is available at **www.theben.de** Please refer to the KNX Handbook for detailed functional descriptions.

