


gSC10

Rear Panel Connections

Dimension: 17"W x 2.25" H x 14" D (431.8mm W x 57.2mm H x 355.6mm D)

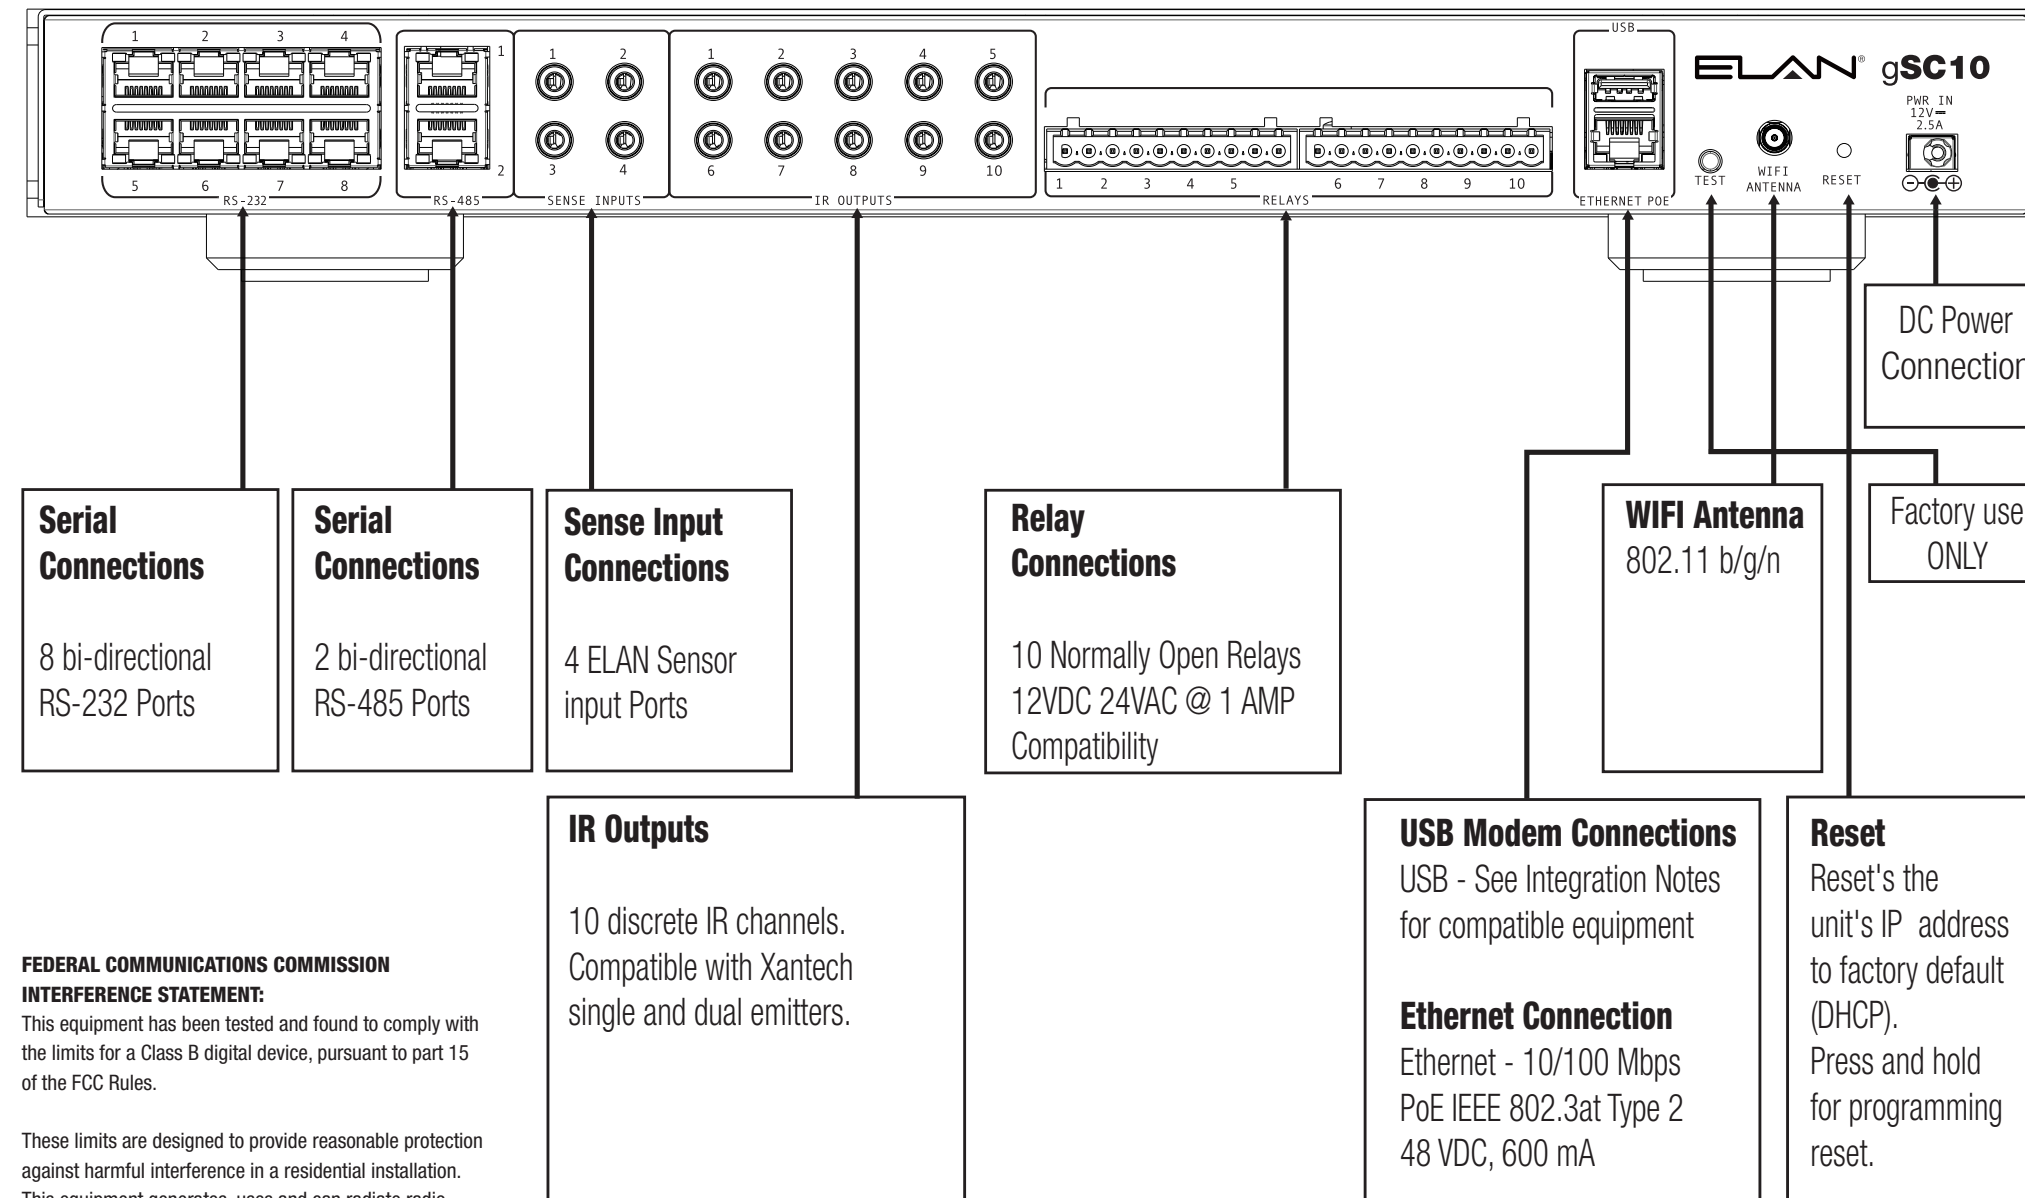

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This radio transmitter has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Cet émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antennes énumérés cidessous avec le gain maximal admissible et impédance d'antenne requise pour chaque type d'antenne indiqué. Types d'antennes n'est pas inclus dans cette liste, ayant un gain supérieur au gain maximal indiqué pour ce type, sont strictement interdits pour une utilisation avec cet appareil.

Antenna Type	Peak Gain
Dipole Antenna	2.09dBi

Informations concernant l'exposition aux fréquences radio (RF):

La puissance de sortie émise par l'appareil de sans fil est inférieure à la limite 'exposition aux fréquences radio d'Industrie Canada (IC). Utilisez l'appareil de sans fil de façon à minimiser les contacts humains lors du fonctionnement normal. Ce périphérique a également été évalué et démontré conforme aux limites d'exposition aux RF d'IC dans des conditions d'exposition à des appareils mobiles (antennes sont supérieures à 20 cm à partir du corps d'une personne).

ELAN®

gSC10

Quick Install Guide

English

g!

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC and IC Information:

This equipment complies with Part 15 of FCC RF Rules. Operation is subject to the following two conditions:

1. This device may not cause interference and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

This Device complies with ICES-003 and RSS-210 of the IC Rules. Operation is subject to the following two conditions:

1. This device may not cause interference and
2. This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC and IC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the exemption from the routine evaluation limits in section 2.5 of RSS 102.

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters from user and bystanders.

Warning: The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102, and users can obtain Canadian information on RF exposure and compliance from the Canadian Representative Product Solutions Group at Tel: (519) 763-4538.

Notice: Use only the antenna provided with the product: R-SMA Antenna, Aristotle Enterprises Inc. p/n RFA-02-L2M2-M10-N, gain of 2.0 dBi.

To protect your equipment from power surges and momentary power interruptions we strongly suggest you utilize a battery-backed power supply (UPS) with this equipment.

ELAN recommends Panamax UPS and power conditioning products for use with your new gSC10. Unpack the gSC10. Verify that you have all packaging contents.

You should have received:

- a. gSC10
- b. 12VDC 2.5A Power Supply
- c. Rack Mount Brackets
- d. 7ea RJ-45 to serial DB9 male adaptors (P/N 8900597)
- e. 2ea RJ-45 to serial DB9 female null modem adaptors (P/N 8900599)
- f. 1ea RJ-45 to serial DB9 female adaptor (P/N 8900598)
- g. Relay wiring connector (2 each)
- h. WiFi antenna
- i. Quick Install Guide (this document)

The g! Training Guide contains valuable hardware and software reference documentation and is considered an important supplement to this document. You would have received the training guide while attending g!School, however the g! Training Guide is updated regularly. Make sure you have the latest version by visiting the ELAN Dealer website at www.elanhomesystems.com and following the "dealer" link.

Note: The gSC10 does not have a ViaNET connection. If your installation has devices that require ViaNET communication you will need to connect an ELAN SC1 to one of the serial RS-232 ports.

www.elanhomesystems.com



Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

1 Mount the gSC10 in the desired location

The gSC10 is designed to mount on a shelf or hang in a cabinet or rack.

Shelf Mounting:

The gSC10 has feet to protect finished surfaces. Set the gSC10 in a location that will allow you to properly manage connected wiring so that tension is not placed on the connections. Wire tension will cause the unit to move and may cause wires to become disconnected.

Dimension: 17" W x 2.25" H x 14" D
(431.8mm W x 57.2mm H x 355.6mm D)

Rack Mounting:

The Rack Mount Brackets included with the gSC10 attach to the chassis using the included screws.


Do not use longer screws to attach the brackets as this may permanently damage the gSC10.

Remove the feet from the gSC10 before rack mounting the unit. When mounting in very warm locations (i.e. enclosed rack or cabinet) leave a rack space above and/or below the gSC10 for ventilation.

Dimensions without feet: 1U or 19" W x 1.75" H
(482.6mm W x 44.45mm H)

2 RS-232 Serial Connections

Connect up to 8 RS-232 serial controlled devices using the included DB9 to RJ-45 adaptors. Please note that each RS-232 port on the gSC10 supports hardware hand-shaking, which is required by some 3rd party devices. See the Integration Notes for the devices you are connecting to determine which DB9 to RJ-45 adaptor should be used and programming specifics. The chart below shows the wiring pin outs for T-568A and T-568B standards

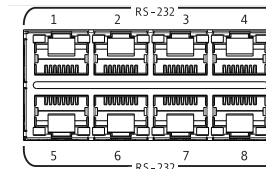


RS-232 wiring pin-outs are as follows:

RS-232 Port Pin #	568A Color Code	568B Color Code	Function
1	White/Green	White/Orange	N/C
2	Green	Orange	DCD
3	White/Orange	White/Green	DTR
4	Blue	Blue	GND
5	White/Blue	White/Blue	RXD
6	Orange	Green	TXD
7	White/Brown	White/Brown	CTS
8	Brown	Brown	RTS

RS-485 Serial Connections

The two RS-485 ports allow connection to Full Duplex (Aprilaire for thermostats, for example) and Half Duplex (Pentair Pool and Spa controllers, for example) RS-485 controlled devices without using adapters. The table below shows the T-568A and T-568B color codes and the function of each conductor of the RS-485 ports. Please refer to the Integration Notes for the device you are integrating for wiring and programming specifics.

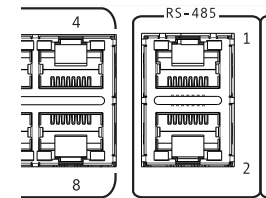


RS-485 wiring pin-outs are as follows:

RS-485 Port Pin #	568A Color Code	568B Color Code	Naming Conventions:		
1	White/Green	White/Orange	RxD +	RD (B)	B+
2	Green	Orange	RxD -	RD (A)	B-
3	White/Orange	White/Green	TxD +	TD (B)	A+
4	Blue	Blue	N/C		
5	White/Blue	White/Blue	N/C		
6	Orange	Green	TxD -	TD (A)	A-
7	White/Brown	White/Brown	GND	GND	GND
8	Brown	Brown	N/C		

3 Relay Connections


Ten normally open relays are available for controlling third party devices. The included removable connectors will accept up to 16ga bare copper leads. Be careful to verify that no portion of one wire touches the other wire. Prior to connection verify that the connected load does not exceed 24volts AC/DC or 1amp. If either parameter is exceeded, add a higher capacity relay to control the load and use the gSC10 output to control that relay.



4 Sense Input Connections


ELAN sensors can be used to input a status from 3rd party devices. The status can either be ON or OFF. This can be used to trigger an event map or as a condition of an event map. Connect ONLY ELAN sensors to these ports.

Available ELAN sensors include: AUDIO, VIDEO, CONTACT CLOSURE, VOLTAGE, LED/LIGHT, and CURRENT/MAGNETIC FIELD sensors.

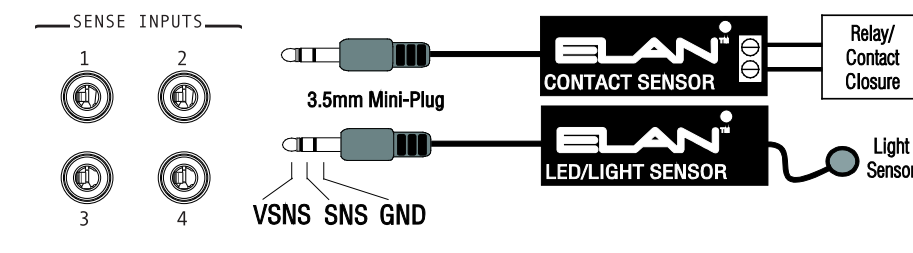


5 IR Output Connections

Ten discrete IR outputs are supplied to control third party devices. The outputs may be configured in g! programming to utilize a carrier or not. Each output is compatible with Xantech single and dual emitters.

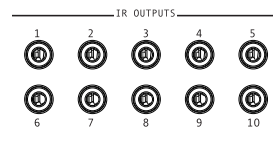

6 USB connection

Some accessories may be connected to the gSC10's USB connector. Refer to the ELAN Integration Note for the device prior to connection.

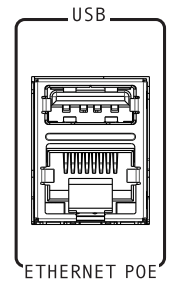

7 Ethernet Connection

Connect the Ethernet connection to an available 10/100 Mbps port on the network. This is the preferred connection. The gSC10 may be powered over Ethernet (PoE). PoE connection must meet IEEE 802.3at Type 2 requirements of up to 25W (@50VDC 600mA max).



8 WiFi Antenna

The gSC10 includes a WiFi radio for installations where a hardwired Ethernet connection is not available. This flexibility allows the gSC10 to be used as both an primary controller and to act as an extender when necessary. Ethernet connection is preferred, and should always be used when available. The WiFi radio should be used sparingly and only in Extender Mode. The antenna connector is a standard R SMA type connector. Use only antennas provided with the equipment or as listed on page 2 of this document. Configuring the WiFi radio may only be accomplished while the gSC10 is connected to an Ethernet connection and is covered in the g! Configurator reference guide.



9 RESET Switch

When pressed momentarily the RESET switch will clear the static IP setup and return the gSC10 to DHCP as well as reset the WiFi configuration to factory default. When pressed and held for more than 15 seconds the programming of the current version will be reset to default. Pressing RESET while applying power will reset the software to the factory version.

WARNING! THIS CANNOT BE UNDONE!!!

10 TEST

The TEST connection is for factory and repair access only. Do not plug anything into the TEST port. Plugging anything into the TEST port will void the warranty and release the magic smoke.

11 Power Connection

Once all other connections have been completed, connect the supplied 12VDC power supply and engage the power switch on the front of the gSC10.

12 Connecting to the gSC10 on your network

The gSC10 is set from the factory for DHCP networking, which means it receives its IP address from the network router. Use g!Tools to find the address and connect to the gSC10.

13 Software upgrade

Prior to configuring the product, upgrade the gSC10 software to the latest version of g! Core Module. Core Module can be found on the ELAN dealer website. The gSC10 is not compatible with g! Core Module releases prior to g!7.0.